

FITTING INSTRUCTIONS

Mitsubishi ASX (07/2010 - ON) – T2C549




Max Towing Capacity: 1050kg	Towbar Weight: 14kg
Max Ball Load: 105kg	Wiring Harness Part #: UNT290



Tools Required:

- Spanners, Sockets, Torque Wrench

Kit Contents					
Item No.	Description	Qty	Item No.	Description	Qty
1.	Towbar	1	7.	M10 x 1.25 x 35 Bolt	2
2.	Ball mount - L264C	1	8.	M10 Shakeproof Washer	2
3.	M12 x 1.75 x 110 Bolt	4	9.	M10 Flat Washer	2
4.	M12 Flat Washer	4	10.	M16 x 2 x 40 Bolt	2
5.	M12 Shakeproof Washer	4	11.	M16 Spring Washer	2
6.	M12 x 1.75 Nut	4			

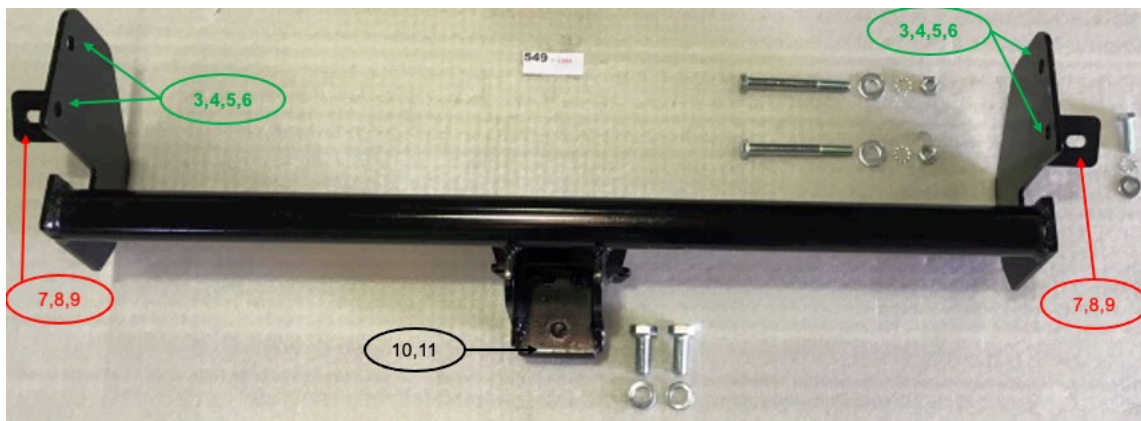

Warning:

- This product is for towing purposes only and must only be loaded as shown in your vehicle Owners Manual.
- This towbar is NOT to be drilled, cut, welded or modified in any way.
- Check behind chassis rail and body panels before drilling to ensure no hazards are present

General:

- Before fitting this towbar read fitting instructions and check installation hardware is correct.
- Check that the towbar is suitable for the vehicle and be wary of any changes to the vehicle design that may conflict with the fitting of this towbar.
- After drilling, blow any filings clear, remove any swarf and treat exposed metal with a rust inhibitor.
- If this vehicle requires a bumper cut out, please check to make sure that you measure twice and check twice before cutting any panels as some bumper profiles can change. If you are not sure, then please ask your towbar supplier

FITTING INSTRUCTIONS

Mitsubishi ASX (07/2010 - ON) – T2C549



Step 1	Drop Exhaust and Make Bumper Cut (if required)	
Instructions	Tools	Torque Spec
a. Remove all bolts from towbar taking note of locations. b. Drop exhaust from rear hangers. c. Make bumper cut if required. (most models require no cut out).	Spanners Airsaw	N/A

Step 2	Install Towbar	
Instructions	Tools	Torque Spec
a. Install towbar using 4 x M10 bolts and washers supplied into existing captive nuts of subframe and leave loose. b. Install 4 x M12 Bolts, washers and nuts into sides of towbar. c. Tighten all bolts with a torque wrench in accordance to the torque spec.	Spanner Torque Wrench	M10-60Nm M12-103Nm

Step 3	Finishing up	
Instructions	Tools	Torque Spec
a. Refit exhaust onto hangers. b. Fit ball mount using M16 bolts and washers supplied and tighten with a torque wrench to 270Nm. c. Attach rating sticker to inside of drivers door pillar.	Torque Wrench	M16-270Nm

FITTING INSTRUCTIONS

Mitsubishi ASX (07/2010 - ON) – T2C549



WARRANTY STATEMENT

The manufacturer of TAG branded products, warrants your TAG Towbar for its full product life under the following conditions:

- You can show proof of purchase.
- The towbar has been correctly installed by a suitably qualified installer.
- The towbar has not been modified or abused in any way and has only been used for the purpose intended.
- The towbar was not fitted second hand to your vehicle.

The extent of this warranty includes materials and workmanship used in the manufacture of the towbar and is to the equivalent value of current, full replacement cost.

Nothing stated or implied in this warranty limits in any way, the statutory rights that you may have.

To make a claim visit the original installer in the first instance or, if you are unable to or are not satisfied with their help, then contact us directly by email at warranty@tagtowing.com