

FITTING INSTRUCTIONS

Ford Ranger/Mazda BT50 (09/11-On) – T4F574



Max Towing Capacity: 3500kg

Towbar Weight: N/A

Max Ball Load: 350kg


Wiring Harness Part #: REFER www.swd.com.au



Tools Required:

- Spanners, Sockets, Torque Wrench

Kit Contents					
Item No.	Description	Qty	Item No.	Description	Qty
1.	Towbar – T4574	1	7.	M12 x 35 x 1.75 Bolt w/wire	2
2.	Chassis Plate	2	Not Shown	Class 4 Pin + Clip	1
3.	M12 Shakeproof Washer	12	Not Shown	Bumper Packer	4
4.	M12 Flat washer	6	Not Shown	M10 x 1.5 x 35 Bolt	4
5.	M12 x 35 x 1.75 Bolt	10	Not Shown	M10 Flat Washer	4
6.	M12 x 1.75 Nut	6	Not Shown	M10 Shakeproof Washer	4

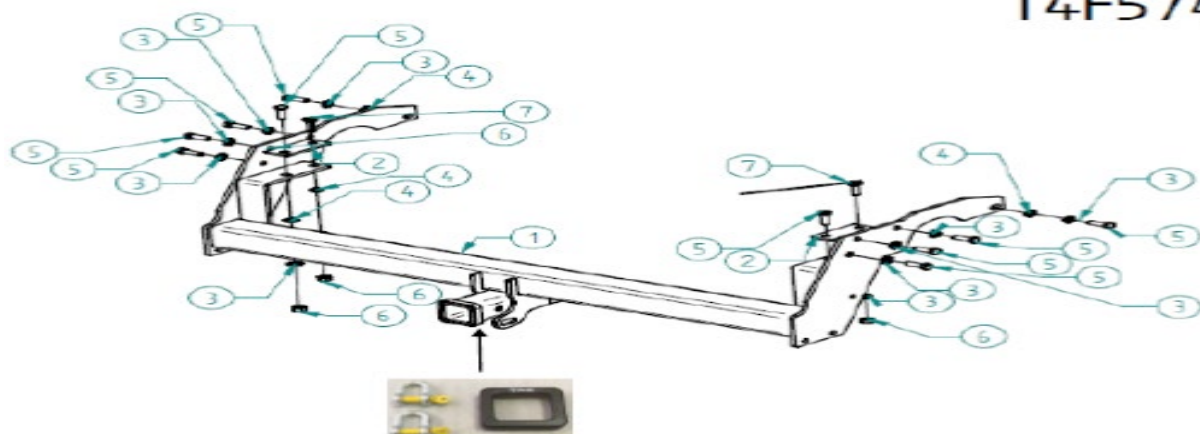

Warning:

- This product is for towing purposes only and must only be loaded as shown in your vehicle Owners Manual.
- This towbar is NOT to be drilled, cut, welded or modified in any way.
- Check behind chassis rail and body panels before drilling to ensure no hazards are present

General:

- Before fitting this towbar read fitting instructions and check installation hardware is correct.
- Check that the towbar is suitable for the vehicle and be wary of any changes to the vehicle design that may conflict with the fitting of this towbar.
- After drilling, blow any filings clear, remove any swarf and treat exposed metal with a rust inhibitor.
- If this vehicle requires a bumper cut out, please check to make sure that you measure twice and check twice before cutting any panels as some bumper profiles can change. If you are not sure, then please ask your towbar supplier

FITTING INSTRUCTIONS

Ford Ranger/Mazda BT50 (09/11-On) – T4F574



Step 1	Removing Rear Step	
Instructions	Tools	Torque Spec
a. Remove rear step if fitted to vehicle	Spanners	N/A

Step 2	Torbar Fitment	
Instructions	Tools	Torque Spec
a. Fit towbar to vehicle with M12 x 1.5 bolts and washers into side of chassis rail. b. Fit M12 x 1.5 Bolts (on on wire) with top plates into chassis rail with nuts and washers. c. If vehicle has step then spread out step brackets and refit to outside of towbar using M12 x 1.5 Bolts.	Spanners	N/A

Step 3	Finishing up	
Instructions	Tools	Torque Spec
a. Tighten all bolts to Torque Spec with a torque wrench. b. Fit ball mount with pin and clip supplied. c. Fit supplied door sitcker to inside of divers door jam	Torque Wrench	M10- 43.4Nm M12- 77.3Nm

Note: ECU must be fitted with towbar, ECU sold separately

FITTING INSTRUCTIONS

Ford Ranger/Mazda BT50 (09/11-On) – T4F574



WARRANTY STATEMENT

The manufacturer of TAG branded products, warrants your TAG Towbar for its full product life under the following conditions:

- You can show proof of purchase.
- The towbar has been correctly installed by a suitably qualified installer.
- The towbar has not been modified or abused in any way and has only been used for the purpose intended.
- The towbar was not fitted second hand to your vehicle.

The extent of this warranty includes materials and workmanship used in the manufacture of the towbar and is to the equivalent value of current, full replacement cost.

Nothing stated or implied in this warranty limits in any way, the statutory rights that you may have.

To make a claim visit the original installer in the first instance or, if you are unable to or are not satisfied with their help, then contact us directly by email at warranty@tagtowing.com