


FITTING INSTRUCTIONS

Mitsubishi ASX 01/10 on – T7C680



Max Towing Capacity: 1400Kg		Towbar Weight: 10Kg			
Max Ball Load: 140Kg		Wiring Harness Part #: UNT290			
Ball Mount: L4180					
 Tools Required: M10 Spanners/Sockets, Torque Wrench (Torque all M10 Bolts to 60Nm), Screwdrivers, Trim Removal Tools, Air Saw or similar					
Kit Contents					
Item #	Description	Qty	Item #	Description	Qty
1.	Towbar (T7C680)	1	7.	Towbar Info Label	4
2.	M10 x 1.25 x 40 Bolt	4	8.	Chassis Spacer Plate	2
3.	M10 Flat Washer	16	-	Pin & Clip	1
4.	M10 Shake-proof Washer	8	-	D-Shackles	2
5.	M10 x 1.25 Nut	8	-	Collar Cover	1
6.	M10 x 1.25 x 110 Bolt	4	-	-	-

T7C680

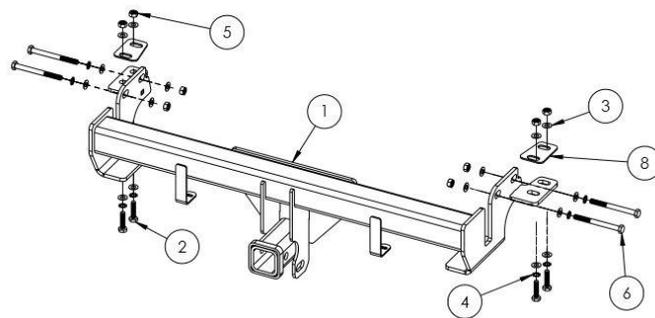

Warning:

- This product is for towing purposes only and must only be loaded as shown in your vehicle Owner's Manual.
- This towbar is NOT to be drilled, cut, welded or modified in any way.
- Check behind chassis rail and body panels before drilling to ensure no hazards are present

General:

- Before fitting this towbar read fitting instructions and check installation hardware is correct.
- Check that the towbar is suitable for the vehicle and be wary of any changes to the vehicle design that may conflict with the fitting of this towbar.
- After drilling, blow any filings clear, remove any swarf and treat exposed metal with a rust inhibitor.
- If this vehicle requires a bumper cut out, please check to make sure that you measure twice and check twice before cutting any panels as some bumper profiles can change. If you are not sure, then please ask your towbar supplier

FITTING INSTRUCTIONS

Mitsubishi ASX 01/10 on – T7C680



Step 1	Remove Tail Lights		
			
Instructions	Tools	Fasteners/Torques	
Remove 2x screws per tail light and unplug the harness to remove tail lights	Screwdriver	NA	


Step 2	Remove Rear Bumper Bar Panel		
			
Instructions	Tools	Fasteners/Torques	
Remove 4x M5 Screws from each side and remove the rubber stop. Remove 5x Screws/Scrivets from each side wheel arches. Remove Scrivets from under the Bumper, 2x total. Carefully Remove the bumper panel from the vehicle (2 people may be required), unplug harness if attached	Screwdriver	NA	

FITTING INSTRUCTIONS

Mitsubishi ASX 01/10 on – T7C680




Step 3 Remove Impact Beam, Shipping Hook and Lower Exhaust

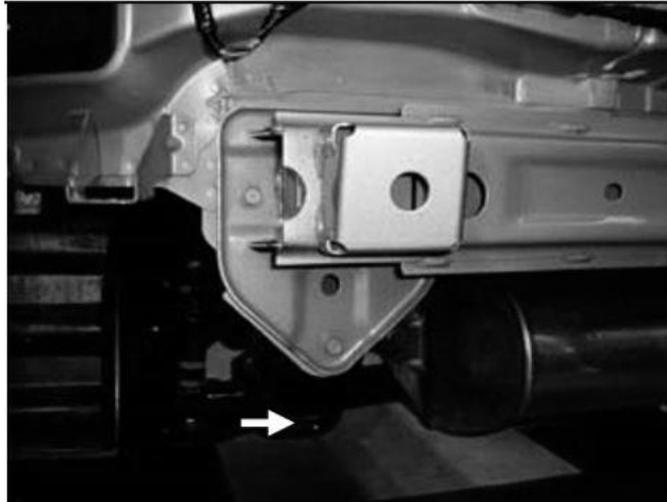

Instructions	Tools	Fasteners/Torques
Remove 3x screws each side to remove the impact beam. Discard Impact beam. Remove 3x M10 Bolts to remove shipping hook. Discard Shipping Hook. Lower the exhaust on 2x rubber hangers to allow more space to install the towbar.	Screwdriver. M10 Spanner/Socket	NA

Step 4 Fit Towbar to Vehicle

T7C680

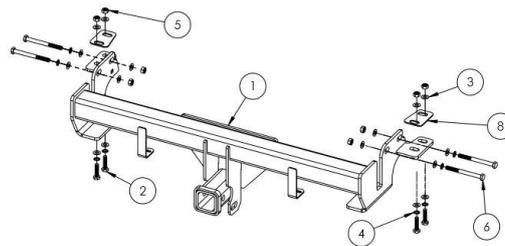

Instructions	Tools	Fasteners/Torques
Position towbar in place on the vehicle. Loosely attach Fasteners: <ul style="list-style-type: none"> - 4 x M10 long bolts (6) with flat washers, shake-proof washers and nuts, use chassis spacer plate (8) between the bar and the chassis - 4 x M10 short bolts (2) with flat washers and shake-proof washers, into captive nuts Tighten all bolts to torque specifications	M10 Spanner/Socket, Torque Wrench	M10 = 60Nm

FITTING INSTRUCTIONS



Mitsubishi ASX 01/10 on – T7C680

Step 5	Perform Bumper Cut (if required). Raise Exhaust, Refit Bumper, Refit Tail Lights
---------------	---

Instructions	Tools	Fasteners/Torques
Bumper cut may be required on some models. Check before refitting bumper. Complete steps 1,2 and 4 in reverse order	Screwdrivers, Spanners/Sockets, Air saw or similar	Refer to vehicle manufacturer specs

Step 6	Apply Sticker to Door Jam
---------------	----------------------------------



Instructions	Tools	Fasteners/Torques
Apply Towbar info label to the inside of the driver's side door Jam.	NA	NA

FITTING INSTRUCTIONS

Mitsubishi ASX 01/10 on – T7C680



WARRANTY STATEMENT

The manufacturer of TAG branded products, warrants your TAG Towbar for its full product life under the following conditions:

- You can show proof of purchase.
- The towbar has been correctly installed by a suitably qualified installer.
- The towbar has not been modified or abused in any way and has only been used for the purpose intended.
- The towbar was not fitted second hand to your vehicle.

The extent of this warranty includes materials and workmanship used in the manufacture of the towbar and is to the equivalent value of current, full replacement cost.

Nothing stated or implied in this warranty limits in any way, the statutory rights that you may have.

To make a claim visit the original installer in the first instance or, if you are unable to or are not satisfied with their help, then contact us direct by phone on 07 3208 3022 or via email qldsales@arandatowbars.com.au