


FITTING INSTRUCTIONS



PART NUMBER: T4K551

Kia Sportage – 08/10 - on
Towing Capacity 1600 Kg /Ball Load 200 Kg
Lug # L4180

- 1) Remove 3x screws from around wheel arches both sides.
- 2) Remove 3x screws from top of bumper and tail light both sides and remove tail lights. Remove 1x screw and 1x plastic clip from behind tail light.
- 3) Remove 5x plastic clips from under side of bumper.
- 4) Gently pull bumper outwards from wheel arch, both sides then remove bumper, release plugs from lights in bumper.
- 5) Remove all wiring from impact beam, leaving loom attached to vehicle.
- 6) From underneath vehicle remove 2x bolts holding impact beam in place, both sides. Discard bolts and impact beam.
- 7) Bumper cut out:

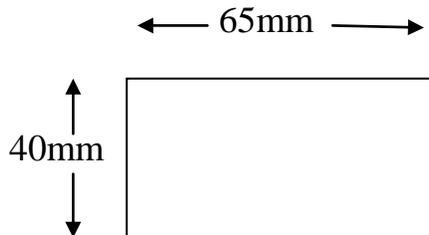

- 8) Loosely fit arms to chassis rails both sides.
- 9) Offer tow bar to vehicle loosely fitting all loose plate's nuts and bolts.
- 10) Tighten all fasteners.
- 11) Re-fit bumper.

**RECOMMENDED ASSEMBLY
TORQUE LISTING**

<u>Diameter</u>	<u>Grade 8.8 Bolt</u>	<u>Nm</u>
M6		9.5
M8		21.7
M10		43.4
M12		77.3
M16		189.8

FITTING INSTRUCTIONS

PART NUMBER: T4K551



**ECU MUST BE FITTED WITH THIS TOW BAR
ECU SOLD SEPARATELY**