


FITTING INSTRUCTIONS



PART NUMBER: T2F475

Ford Territory 4/04 onwards
Towing Capacity 1600Kg / Ball Load 160Kg
Lug # L213c

1. Lift tailgate.
2. Remove tail lights.
3. Remove bumper.
 - a) Remove screws near tail lights.
 - b) Remove screws & clips from wheel arch.
 - c) Pull bumper sideways to unclip from body.
 - d) Remove clips from under bumper.
4. Fit towbar to rear of vehicle using 6x M12 corflex bolts. NOTE: Use grease of some form or lube for easy fitment.
5. Tighten all bolts to torque settings below.
6. Cut bumper – find the centre and measure down from the deep groove 55mm & 90mm wide and down to the edge of the bumper.
- 7.

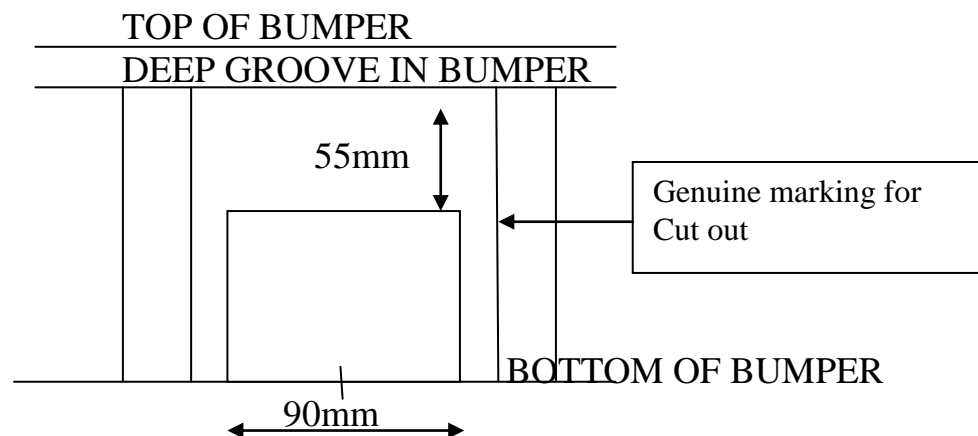

8. Refit bumper.
9. Refit tail lights.
10. Fit tongue with bolts supplied

FITTING INSTRUCTIONS

PART NUMBER: T2F475



11. Fit door sticker supplied to door.

**RECOMMENDED ASSEMBLY
TORQUE LISTING**

<u>Diameter</u>	<u>Grade 8.8 Bolt</u>	<u>Nm</u>
M6		9.5
M8		21.7
M10		43.4
M12		77.3
M16		189.8